

-DLP03 -DLP04

Halat Aktarmalı Kilit Açma Magneti Steel Rope Actuating Travel Locking Magnet

MONTAJ ve BAKIM KILAVUZU
INSTALLATION AND MAINTENANCE MANUAL





DELTA TEK & LİFSOR
High Quality Elevator Components


Form no: F-PK-03

DLP03 ve DLP04 üç farklı çeşit voltaj değeri ile üretilmektedir.
190 VDC, 60 VDC ve 220 AC.


Pompa çalışma hızı ayarı
Magnet operating speed adjustment

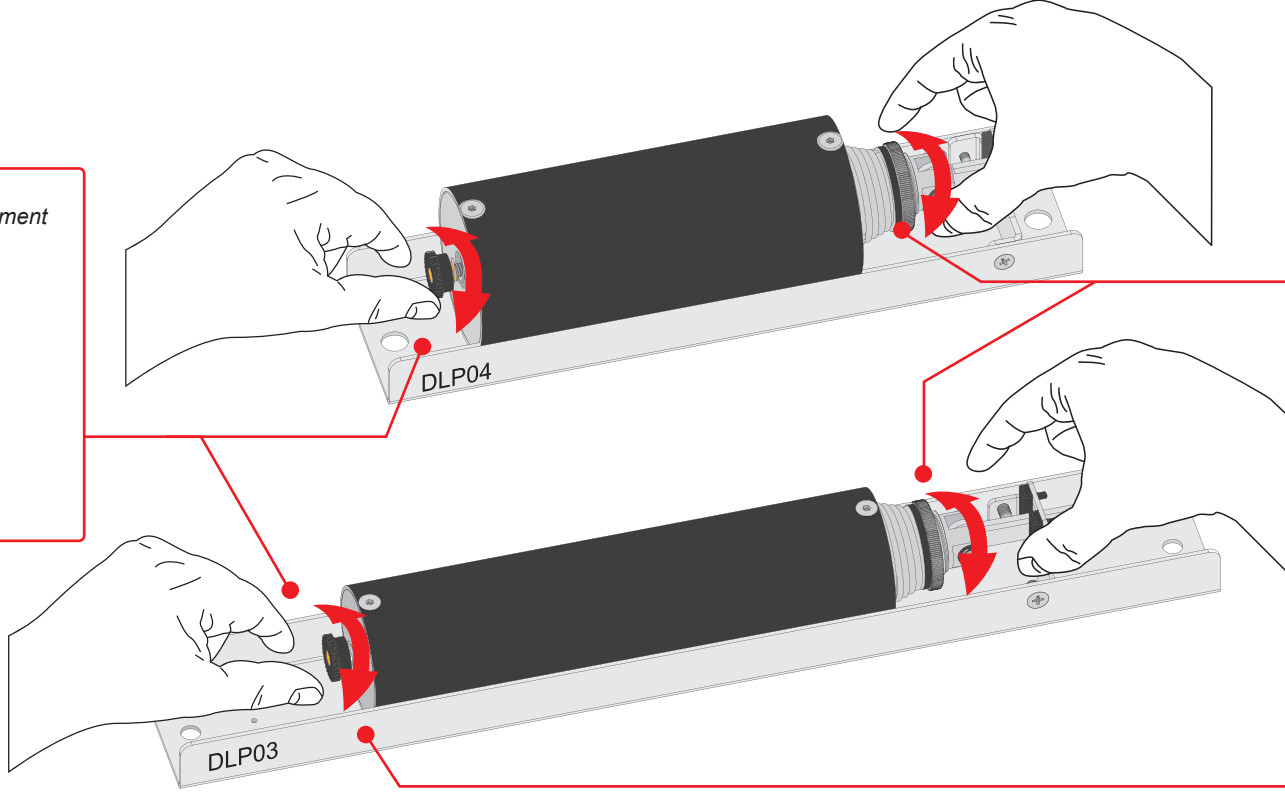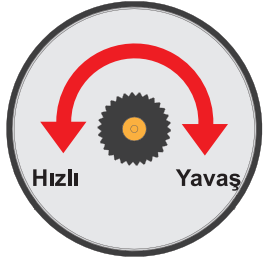

Yay sertlik ayarı
Spring stiffness adjustment

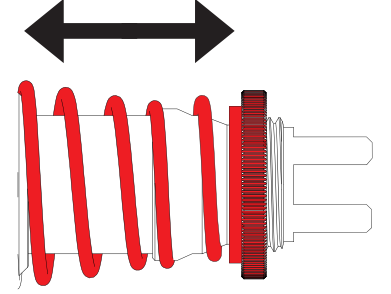

Klemens bağlantısı
Terminal wiring



MONTAJ SIRASINDA DİKKAT EDİLMESİ GEREKENLER;

- 1- Elektrik bağlantısı yaparken pompa üzerindeki kabloları zarar vermeyiniz.
- 2- Ürün vida montaj yuvası dışında ürüne delik açmayınız.
- 3- Pompa çalışma hızı ve yay ayarını doğru ayarladığınızdan emin olunuz.
- 4- Topraklama bağlantısını muhakkak yapınız.
- 5- Aylık bakımlarda ürünün düzgün çalışıp çalışmadığını kontrol ediniz. Ayar bozulduysa tekrar ayarlayınız.

THINGS TO BE CONSIDERED DURING ASSEMBLE:

- 1- Do not damage the cables on the pump when making the electrical connection.
- 2- Do not drill holes in the product other than the product screw mounting slot.
- 3- Make sure that you have adjusted the pump operating speed and spring setting correctly.
- 4- Be sure to make the grounding connection.
- 5- Check whether the product is working properly during monthly maintenance. If the setting is broken, adjust it again.